

SCORE BOARD OPERATION [WEST RINK]

- #1 ENTER MODEL CODE NUMBER [008 3261]
- #2 USE SHOT CLOCK ? PRESS NO
- #3 USE PENALTY TIME OUT ? PRESS NO

FIRST THREE STEPS ONLY FOR START UP OF SCORE BOARD
FROM OFF POSITION

TIMER OPERATION

- #4 TO SET CLOCK START WITH SET KEY
- #5 THEN TIME KEY [THE DISPLAY SHOULD SAY TIME]
- #6 ENTER AMOUNT OF TIME YOU WANT [DONT FORGET THE COLON :
EXAMPLE: 16:00
- #7 IF TIME IS CORRECT PRESS YES
DISPLAY NOW SHOWS PERIOD ENTER CORRECT PERIOD

IF YOU DID IT CORRECT THE SCORE BOARD SHOULD HAVE THE TIME
AND PERIOD ONLY ON SCORE BOARD

SCORING

- #8 PRESS HOME SCORE OR GUEST SCORE. THE DISPLAY SHOWS
HOME + OR GUEST + PUT NUMBER IN YOU WANT
- #9 CORRECTING SCORE PRESS SET KEY THAN EITHER HOME OR GUEST
SCORE WHICH EVER NEEDS CORRECTING
- #10 NOW ENTER ANY AMOUNT YOU WISH

SET PENALTY TIME

- #11 PRESS SET THEN HOME PNLTY OR GUEST PNLTY
- #12 PRESS 2:00 OR AMOUNT OF TIME NEEDED THEN PRESS YES
THE DISPLAY NOW SHOWS PLAYER
- #13 PRESS THE PLAYERS NUMBER
- #14 NOW PRESS HOME PNLTY OR GUEST PNLTY

CLEARING PENALTY

- #15 TO REMOVE A PENALTY FROM SCORE BOARD [EX. A GOAL SCORED]
- #16 YOU NEED TO BRING UP THE PLAYER # ON DISPLAY
HOME OR GUEST PNLTY PRESS THIS KEY WHEN CORRECT PLAYERS #
SHOWS ON DISPLAY PRESS PNLTY CLEAR