

TIME CLOCK INSTRUCTIONS FOR GAME CLOCK

- 1- Unlock the box protecting the scoreboard controls.
- 2- Turn the scoreboard power on; the switch is on the back of the control board.
- 3- Do not continue the previous game, hit the CLEAR Button.
- 4- If the code shown is not 062, enter 062 then hit the ENTER button.
- 5- Hit the CLEAR/NO button when prompted for Tenths of a Second.

SETTING GAME TIME

- 1- Hit the SET MAIN CLOCK button.
- 2- Type in the time and hit the ENTER button. . Ex. 5 minutes, type in 500. (check the display on the scoreboard control)
- 3- To run the time hit the START button, To stop the time hit the STOP button.
- 4- To enter the periods, hit the PERIOD+ button until you have the desired period on the scoreboard.
- 5- To reset the time after a period hit the SET TIME button and then the ENTER button. The previous period time will be entered automatically. If you need to enter a different time length repeat steps 1 & 2 with the new time.

ENTERING PENALTIES

- 1- Hit the PLAYER/PENALTY button.
- 2- Hit the ENTER button.
- 3- Type in the player number. (does not show on most scoreboards, but is useful if you need to delete penalties)
- 4- Hit the ENTER button.
- 5- Type in the penalty time. Ex. A 1:30 penalty, hit 130. (Double check the scoreboard control display)
- 6- Hit the ENTER button.

REMOVING PENALTIES

- 1- Hit the PLAYER/PENALTY button.
- 2- Hit the UP ARROW key until the penalty you need to remove shows on the scoreboard control display (check player number and time remaining to make sure you have the correct one if there are multiple penalties on the clock).
- 3- Hit the CLEAR button.
- 4- Hit the ENTER button.

AFTER GAME

- 1- Turn the scoreboard off.
- 2- If you checked out the scoreboard key, lock the scoreboard and return the key to the front desk.