

TIME CLOCK INSTRUCTIONS

Dobson

1. TO SET GAME TIME - PRESS "SET TIME", THEN 1,5,0,0 FOR THE 15 MINUTE FIRST & SECOND PERIODS OR 1,2,0,0 FOR THE 12 MINUTE THIRD PERIOD - WATCH THE NUMBERS AS YOU PRESS THEM TO INSURE YOU HAVE THE CORRECT AMOUNT OF ZEROS, THEN PRESS "ENTER".
2. TO SET PERIOD - PRESS "PERIOD", THEN 1, 2, OR 3 DEPENDING ON WHICH PERIOD IT IS, THEN "ENTER".
3. TO RECORD GOALS SCORED - PRESS "HOME +1" OR "GUEST +1" AND THE SCORE WILL INCREASE BY 1. IF YOU PUT UP AN INCORRECT SCORE, YOU CAN CORRECT IT TWO WAYS:
 - * PRESS HOME OR GUEST "SCORE", THEN "CLEAR", THEN "ENTER" OR
 - * PRESS HOME OR GUEST "SCORE", THE CORRECT SCORE (i.e 1,2,3) THEN "ENTER".
4. TO ENTER A PLAYER PENALTY -
 - PRESS "PLAYER PENALTY" FOR EITHER HOME OR AWAY
 - PRESS "ENTER"
 - ENTER PLAYER NUMBER NOW - i.e. 1,8
 - PRESS "ENTER"
 - AT THIS POINT THE COMPUTER WILL PUT IN 2:00 AUTOMATICALLY FOR THE PENALTY TIME, AND WILL BLINK "2:00". IF YOU NEED TO CHANGE THE PENALTY TIME (i.e 4:00). ENTER IT NOW.
 - AT THIS POINT, THE PENALTY WILL NOT YET BE DISPLAYED ON THE SCOREBOARD. THE PENALTY TIME SHOULD STILL BE BLINKING.
 - IF YOU ARE IN THE FIRST OR SECOND PERIODS WITH RUNNING TIME, DO NOT PRESS THE LAST "ENTER" UNTIL THE PUCK IS DROPPED FOR THE FACEOFF FOLLOWING THE PENALTY - AT THIS TIME THE PENALTY WILL BE DISPLAYED ON THE SCOREBOARD, AND WILL RUN WITH THE CLOCK.
 - IF YOU ARE IN THE THIRD PERIOD WITH STOP TIME, YOU MAY PRESS "ENTER" IMMEDIATELY AFTER THE PENALTY TIME BEGINS TO BLINK. THE PENALTY WILL BE DISPLAYED ON THE SCOREBOARD, BUT TIME IS NOT STARTED UNTIL THE FACEOFF.
5. TO CLEAR A PENALTY OFF THE SCOREBOARD - PRESS "PLAYER PENALTY" FOR TEAM YOU ARE TRYING TO CLEAR. IT WILL DISPLAY AS A BLANK PENALTY SCREEN WITH A "2" IN FRONT OF IT. PRESS THE UP ARROW TO GET BACK TO THE ORIGINAL PENALTY - IT SHOULD DISPLAY AS A "1" WITH ALL THE PENALTY INFORMATION BEHIND IT. PRESS "CLEAR" THEN PRESS "ENTER", AND PENALTY SHOULD BE ERASED FROM THE SCOREBOARD.
6. IF AT ANY TIME YOU MAKE A MISTAKE IN ENTERING SOMETHING - i.e. TIME, PERIOD, SCORE ETC, JUST PRESS THAT ENTITY, AND THEN "CLEAR" AND THEN "ENTER".

IF YOU GET INTO TROUBLE WITH THE CLOCK, ENTERING A PENALTY, ETC., STOP THE CLOCK AND NOTIFY THE OFFICIALS.

SCOREBOARD OPERATION DIRECTIONS

There are three things you need to know to operate the scoreboard during a game. They are **SET TIME, ADD SCORE, SET PENALTY AND CLEAR PENALTY**.

To turn on the scoreboard you need to flip the switch on the bottom right side of the scoreboard box. It will then give you a prompt and ask you if you would like to **START WHERE YOU LAST LEFT OFF, PRESS YES**. If you pressed **NO**, you will then need to enter the model code located on the middle of the box, and then follow the prompts.

The clock on and off buttons are on the lower left of the box. To start the clock you must press **TIME ON**. To turn off the clock because of referee whistle or because of the end of a period, you press **TIME OFF**.

TO SET TIME

Press **SET**

Press **TIME**

Enter length of period.

(ex. 12:00.0) **(punch in 4 digits)**

It will then prompt you for a Y or N

Press **Y**

Enter period 1, 2 or 3

ADD SCORE

When a team scores you simply do this:

Press **SET**

Press either **HOME SCORE** or **GUEST SCORE**

Press the number of goals the team has accumulated.

You can set the score while the clock is running.

SET PENALTY

Press **SET**

Press **HOME PENALTY** OR **GUEST PENALTY**

Enter the length of the penalty

(ex. 02:00) **punch in 4 digits - 0-2-0-0**

It will then prompt you for a Y or N

Press **Y**

Enter players **TWO DIGIT NUMBER**

(If player's number is 5, enter 05)

CLEAR PENALTY

Press **HOME PENALTY** OR **GUEST PENALTY**

Press **PENALTY CLEAR**

It will then prompt you for a Y or N

Press **Y**

2nd PENALTY ON THE SAME TEAM

Set as instructed above. The time will not show on the score board

BUT when the first penalty expires, the 2nd penalty time will

automatically show up on the score board in its place.

....and so on for a third.

**THANK YOU for volunteering
your time,**

