

DAKTRONICS



TIME 0:00.0
H= 7 G= 1 EN

all sport
5000 SERIES
CONTROL CONSOLE

HOCKEY/LACROSSE
HANDBALL
CODE TYPE
4000 SOG CONSOLE
4401 W/O SOG
4402 W/ SOG
4102 LC > BB
4103 SERIES 3000
4104 SERIES 2500
4105 PVR/R/P/S
4601 HK > FB
4602 LC > FB
4701 HK > SOC
4702 LC > SOC

HOME

SCORE +1	SCORE -1	TIME OUT ▶
SHOTS ON GOAL +1	SHOTS ON GOAL -1	
SAVES +1	SAVES -1	PENALTY ▶
PLAYER PENALTY	DELETE PENALTY	CLEAR ALL PENALTIES

RECALL
SHOT
TIME

SET
SHOT
TIME

TIME OUT
ON/OFF

ENABLE
PENALTY
CLOCK

DISABLE
PENALTY
CLOCK

MINOR
PENALTY

MAJOR
PENALTY

PERIOD
+1

GUEST

SCORE +1	SCORE -1	TIME OUT ▶
SHOTS ON GOAL +1	SHOTS ON GOAL -1	
SAVES +1	SAVES -1	PENALTY ▶
PLAYER PENALTY	DELETE PENALTY	CLEAR ALL PENALTIES

7	8	9
4	5	6
1	2	3
CLEAR NO	0	ENTER * YES



EDIT

AUTO
HORN

HORN

COUNT
UP/DOWN

SET
MAIN
CLOCK

START

STOP

SCORE CLOCK OPERATION

1. Score clock power switch is behind the counsel; flip on, screen on counsel will ask if you want to resume game. Enter NO, and then it will ask you for a code. The code for hockey is 62. Press enter and continue.
2. To set the time, go to SET MAIN CLOCK, press it and enter in the desire time, make sure the minutes go past the colon when entering the time. Once you've entered the time, press ENTER, the desired time should be on the board.
3. For periods, press PERIOD +1 to go to the next period. If you need to go down a period, press PERIOD, after that enter the number of the period that you want, then press ENTER.
4. Penalties are the trickiest part. For a penalty, you need to press PLAYER * PENALTY *. This will bring the penalty onto your screen only, then press ENTER. After that, enter the player's jersey number, then press ENTER again. 2:00 minutes will come up on your screen. If it is a 2:00 minor penalty, just press ENTER and the penalty will come up on the board. If it is not a minor, you will have to enter a different time when the 2:00 comes up on the screen and then just press enter when you are done and it will appear on the clock. For example, if 27 gets a minor penalty the steps go as follows: Press (PLAYER*) (PENALTY*) (ENTER) (27) (ENTER) (ENTER).
5. In running time games or periods, you will need to know how to stop just the penalty clock and start it without stopping the regular time. You do that by pressing DISABLE PENALTY CLOCKS to stop the penalty. To start it again, press ENABLE PENALTY CLOCKS.
6. If a team on the power plays scores a goal, you will need to get the penalty off the clock. To do this, press PLAYER* PENALTY* use the arrow pad and press up until you see the penalty that needs to be removed. Once it is on your screen, press CLEAR and then ENTER. This will remove the penalty.
7. For goals, press SCORE +1 to add a goal. If for any reason you need to do something other than just add a goal, press SCORE, and enter the desired goal amount you want on the board and press ENTER.
8. The most important thing you need to know is to press ENTER after every step.
9. ***If either the home or visitor penalty is not functioning, but the rest is, turn power off to scoreboard, turn back on and push NO to resume game. Verify the correct code has been entered.