

# APEX Center (East & West Rinks)

## Time Clock Instructions

To turn on score board and controller unit, turn switch to ON, on the lower right side of the clock controller unit.

Initial Setup at Power up:

Answer the following questions/Prompts that show on the display

A. Do you want to continue where you left off?

NO

B. Please enter your model code (located on name plate): 871

C. Do you want to use the Shot Clock?

NO

D. Do you want to use the Penalty Clock?

NO

E. Set score to zero at beginning of the game:

Set

Home

0

Set

Guest Score

0

Set Time & Period:

A. Press

Set

Time

#

#

:

#

#

YES

#

(Period)

B. Example:

Set

Time

5

:

0

0

YES

To Increment Score: Enter 1 for each goal scored; score will accumulate

Press

Home Score

1

Controller will return to display time

Press

Guest Score

1

Controller will return to display time

To set Penalty Clock:

Stopped Clock: Press

Set

Home Pnlty

#

:

#

#

(Time),

#

#

(Player Number)

For Visitors:

Set

Guest Pnlty

#

:

#

#

(Time),

#

#

(Player Number)

For RUNNING CLOCK wait for puck to drop to enter second digit of player number. This starts penalty clock.

To clear Penalty Clock:

Press:

Home Pnlty

Pnlty Clear

YES

Or

Guest Pnlty

Pnlty Clear

YES

Use hand held switch to shut off horn at time 00:00