 


Hockey Scoreboard Operation Guide

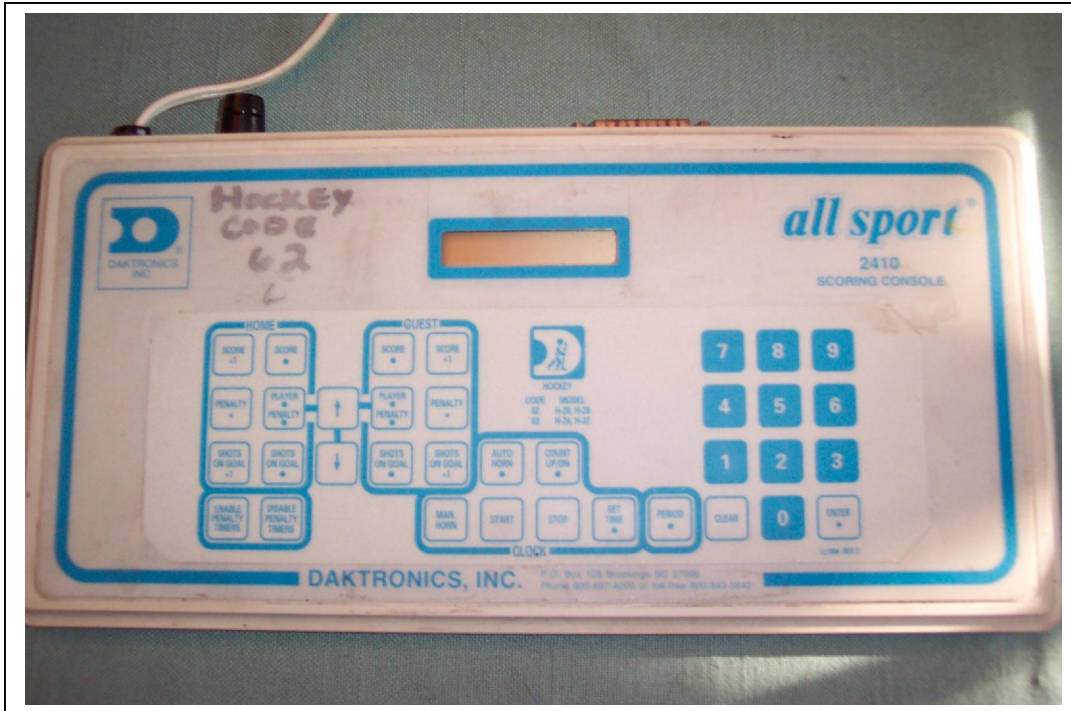

September 23, 2003

The following are the basic function you will perform when running the Scoreboard :

- Start and Stop Play Clock
- Enter score for each team
- Enter and Delete Penalty Times for Players
- Enter Shots-On-Goal

Setup

To setup the controller for running the scoreboard, do the following:

1. Make sure the Controller Cable is connected to the proper outlet.
2. Plug in the Power Cord.
3. When you power up the controller, the controller will go through a series of checks to make sure it is ready to use. When complete, you will see “**ENTER CODE:**” displayed in the controller display window.



4. Using the Controller KEY PAD, **press 62** and then the “**ENTER**” Key.

If you want to use the “SHOT CLOCK” function, **press 63** and then the “**ENTER**” Key.

You are now ready to start using the Controller.

Time Keeping

The following are steps to set and run the Game clock:


You must first set the time for the period:

1. Press the “SET TIME” key on the controller.




Set Time

2. Using the controller Key Pad, enter the time for the period and press the “ENTER” Key (ie 2000 for 20 minutes) .

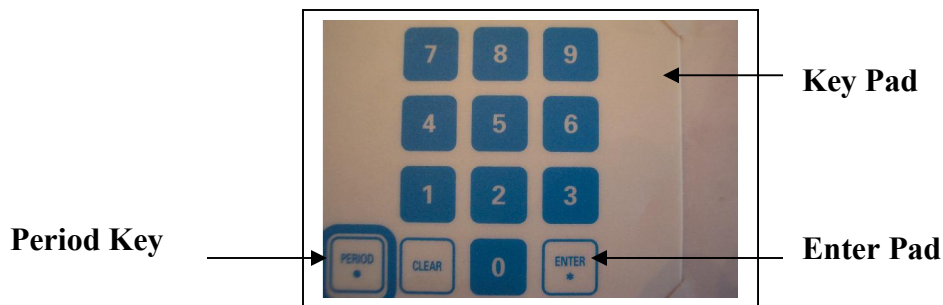

1. Set the Period Number by pressing the “PERIOD” key then 1, 2, or 3 on the key pad followed by pressing “ENTER”.
2. START the clock by pressing the “START” key.

 STOP the clock by pressing the “STOP” key.

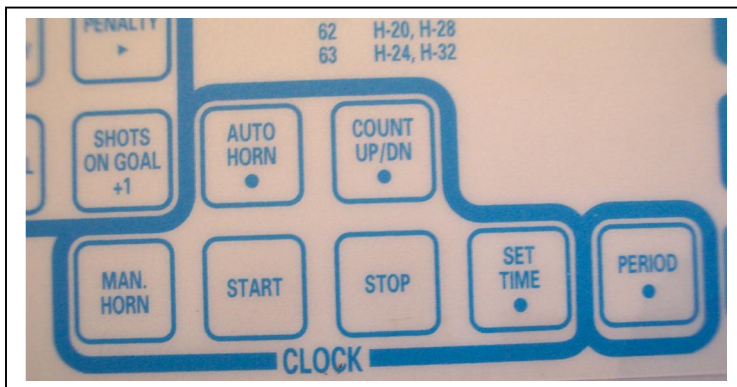

The HORN will sound automatically when the period ends. However, if you need to sound the HORN manually, just press the “MAN HORN” key on the controller.

Entering a Penalty


When a penalty is called by the referee, the referee will blow the whistle. You will **STOP the CLOCK** at the sound of the whistle.

Always put the penalty on the board before you write it on the scoresheet.

To enter the penalty on the scoreboard, do the following:

1. Press the “Player/Penalty” button for the team receiving the penalty, and then press **ENTER**.
2. Using the Key Pad, enter the player number and press **ENTER**.
3. Using the Key Pad, enter the penalty minutes (ie 300 for 3 minutes) and press **ENTER**. Note, the minutes will default to 2 minutes. If this is the number you want, all you have to do is press **ENTER**.


If a second penalty is issued to the same team, the board will automatically advance to penalty no. 2, or 3, or 4, etc. As a penalty expires, the next penalty will be displayed automatically on the scoreboard.

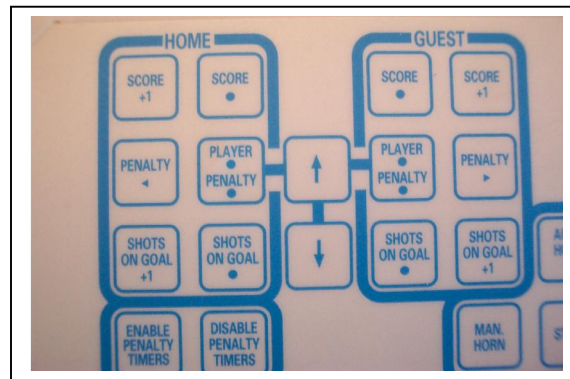

Clearing a Penalty

If you need to clear a penalty or correct a penalty, do the following:

1. Stop the clock
2. Press “PLAYER/PENALTY” for the team you need to clear.
3. Look at the display, and press the UP or DOWN arrow until you see the penalty you want to Clear.
4. Press the “CLEAR” button located on the control panel, and press ENTER.

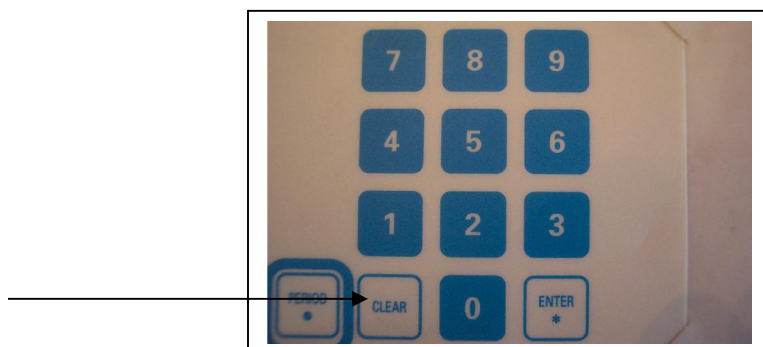

Change or Correct a Score

If you want to change or correct a score on the board, do the following:

1. Press the “SCORE” button for the team you want to change the score.
2. Use the Key Pad, and enter the correct score, then press ENTER.

Add a Goal to the Score

To add a goal to the score, press the “SCORE + 1” button for the appropriate team.

Shots on Goal

To add a shot on goal, press the “Shot on Goal + 1” button.

