

## SUMMARY ON HOW TO RUN THE TIME CLOCK AT THE ICEPLEX.

"HOME" WAS USED FOR ALL EXAMPLES--FOLLOW SAME INSTRUCTIONS WITH GUEST KEYS

<b>START UP</b>	Connect two cables, power on switch is on right side of unit ENTER MODEL CODE 871 (displayed on unit) "YES" TO USE PENALTY TIME OUT
<b>SET CLOCK</b>	Press SET/TIME enter time you want with all digits 1-2-0-0-for 12:00 for 12 min 0-1-0-0 for 1:00 for 1 minute Press YES next it asks for period--type in period number to set clock to zero, just press SET then TIME then YES
<b>HORN</b>	To set the horn to automatically sound when the clock hits 0.0, Press SET, then HORN and answer YES. The horn sounds automatically at the end of a period but YOU MUST hit the TIME OFF button to turn the horn off! If you want to manually control the horn, hit HORN key
<b>SCORE</b>	Enter a score for the Home Team-press HOME SCORE-then 1 every time the home team scores, you can repeat this procedure by hitting HOME SCORE-then 1 and it will add one to the score If you make a mistake, you must hit SET/HOME SCORE then put in the correct number then hit YES GUEST SCORE works the same
<b>"GOAL" LIGHT</b>	The HOME GOAL and QUEST GOAL keys just light up "GOAL" on the score board. It toggles off and on when pushed multiple times When a goal is scored, it is optional to press the "GOAL" key. If you do, remember to press it a 2nd time after a minute or so to get the goal light back off!
<b>RUN CLOCK</b>	Hit TIME ON to run clock, and TIME OFF to stop clock. Remember, you need to hit TIME OFF to stop the horn at the end of each period or time out
<b>SHOTS ON GOAL Only on Blue Rink</b>	Optional to use--works the same way as setting the score. Press HOME SHOTS/1 everytime you want to increase the shots by one If you want to enter a total number, enter SET/HOME SHOTS/then the number
<b>PENALTY TIMER</b>	You can enter up to 5 penalties although only the first 2 will be displayed. When penalty 1 runs out, penalty 3 will be displayed and so on.
<b>SET PENALTY</b>	SET/HOME PENALTY/put penalty minutes (ex: 0130 for 1:30/YES You will then be prompted to enter the player number YOU MUST ENTER A 2 DIGIT NUMBER (I.E: #5 = 05)
<b>CLEAR PENALTY</b>	HOME PENALTY (until the correct penalty is on the display)PENALTY CLEAR/ the display then will read CLEAR (Y-N) Press YES and its gone
<b>PENALTY ON OFF</b>	When you want to run the clock without running the penalty clock, the penalty ON OFF should be set to OFF--IMPORTANT This key toggles between off and on when you want to stop the penalty timers WITHOUT stopping the main time. When you run a clock between periods and you don't want the penalty minutes to run make sure you answer OFF to penalty time out. REMEMBER TO CHANGE IT BACK TO "ON" WHEN THE PERIOD STARTS
<b>SET TIME OF DAY After the Game</b>	To restore the time of day on the score clock, please follow these instructions: Press SET, then Press CHRONOMETER, a set of 4 questions will come up Press YES to all of them, EXCEPT Set Chronometer, this you will press NO At end of questions, you will see DISCONNECT CABLES BEFORE TURNING OFF - just unscrew the two cables to the score clock, then turn the power off. The score clock should now display the Time of Day (as set by our GPS clocks)

YES KEY IS LIKE ENTER.