

West Rink Clock Instructions

Home					Guest											
Score +1	Score -1	Time Out		Timeout On/Off	Score +1	Score -1	Time Out	7	8	9	<div>▲</div> <div>◀ Menu ▶</div> <div>▼</div> <div>Edit</div>	Auto Horn	Horn			
Shots +1	Shots -1		Enable Penalty	Disable Penalty	Shots +1	Shots -1		4	5	6						
Saves +1	Saves -1	Penalty	Minor Penalty	Major Penalty	Saves +1	Saves -1	Penalty	1	2	3			Count Up/Down	Start		
Pen Player	Delete Pen	Clear all pen		Period #	Pen Player	Delete Pen	Clear all pen	Clear No	0	Enter Yes			Set Main Clock	Stop		

Prepare the System

1. Flip switch on back of board
2. Resume Game?
3. Press "Enter / Yes"
4. Edit Settings?
5. Press "Enter/Yes"
6. Press "Menu" until display reads New Game
7. The Scoreboard should be activated

Set the Clock – Each Period

1. Press "Set Main Clock"
2. Use the number pad to enter the time
3. Press "Enter / Yes"
4. Press "Auto Horn" and verify that it indicates "Yes"

Between Periods

1. Press T/O On/Off
2. Full T/O?
3. Press "Enter/Yes"

** If you need to put time back on the clock – use these instructions and reset.

Penalties

1. Press "Penalty Player" for the correct team
2. Enter player number using the number pad
3. If the length of the penalty is longer than 1:30 - use the number pad to enter the time.

Running the Music

1. The Four Seasons Staff need to switch the system in the office.
2. You can either use CD or iPod/MP3 player.
3. CD volume is "CD"
4. iPod volume is "Aux"
5. Microphone volume is

The scoreboard in west does not have shots/saves - no need to enter it.

You will probably use the hand-held device to run the clock.