

EMEGENCY EXIT - DOORS



DIAGRAM IS NOT TO SCALE



Security of the WEST and EAST emergency exit doors

If you are the FIRST to arrive at the dome

- 1) remove the "security bar" from the west and east doors
- 2) make sure door is securely latched
- 3) set bars on top ledge of desk
- 4) check the "latch" hourly to make sure door is secure

If you are the LAST to leave the dome

- 1) Place the "security bar" in the west and east doors
- 2) see photos below for more detail

WEST

EAST

Emergency Exit Door

Emergency Exit Door



Call 651-485-8843 if you have any questions

Batting Cage 3

Batting Cage 2

Batting Cage 1

Emergency Exit Door