


# All Sport 5000 Series Console Quick Start Guide

1 of 4

This guide will assist with starting up and operating an All Sport 5000 series scoreboard controller. For more detailed console operation and configuration, refer to the All Sport 5000 Series Console Operations Manual (ED-11976), available online at [www.daktronics.com/allsportsupport](http://www.daktronics.com/allsportsupport).

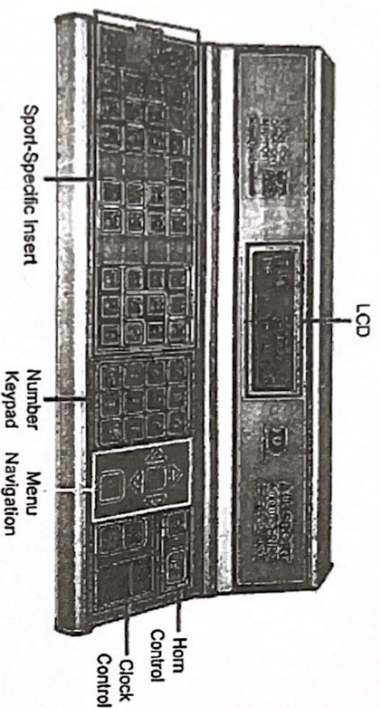

## LCD

This screen displays current game information and menu choices.

## Number Keypad

- 0-9 - Use these keys to enter scoring and statistical values.
  - ENTER \* YES - This key has two functions:
    - Press to complete an action.
    - Press to answer "YES" for input prompts (Y).
  - CLEAR / NO - This key has two functions:
    - Press to clear the LCD of numerical information.
    - Press to answer "NO" for input prompts (N).
- ## Menu Navigation
- MENU - Press to select from a list of standard and sport-specific options.
    - Use ▲ and ▼ to scroll through the menus.
    - Use ◀ and ▶ to enter and exit submenu lists.
    - Refer to the Operations Manual for the menu settings of each sport.

- EDIT - Press this key followed by one of the sport-specific scoring keys to modify the current value. Simply enter the new value using the number keypad and then press <ENTER>.

## Clock Control

- START - Press to start the main clock. A green LED on the key illuminates while the main clock is running.
- STOP - Press to stop the main clock.
- SET MAIN CLOCK - After the main clock has been stopped, press this key to display the current time of the main clock.
  - Enter the desired time using the number keypad and then press <ENTER> to set the clock.
  - Press <CLEAR> twice to cancel the changes and return to the game.
  - Refer to Section 2.5 of the Operations Manual for more information.
- COUNT UP/DOWN - After the main clock has been stopped, press this key to set the direction of the clock.
  - Press <1> or <2> to select UP or DOWN (default).
  - The current direction of the main clock is shown on the top line of the LCD with an ↑ or ↓.

## Horn Control

- AUTO HORN - Press this key to enable/disable the automatic horn.
  - Press <1> or <2> to select ON (default) or OFF. An amber LED on the <HORN> key illuminates when the Auto Horn is enabled.
  - If the Auto Horn is ON (the LED is on) the horn will automatically go off when the clock reaches "00:00".
- HORN - Press to sound the main horn. If the scoreboard is equipped with one. The horn sounds as long as the key is held.

## Sport-Specific Insert

This shows keys specific to a sport. Refer to Page 3 for more information.

DD2077845 Rev 2  
18 May 2016

201 Daktronics Drive PO Box 5128, Brookings, SD 57006-5128  
Tel: 1-800-DAKTRONICS (1-800-325-8786) Fax: 605-697-4746  
Web: [www.daktronics.com/allsportsupport](http://www.daktronics.com/allsportsupport)

