

## CSA Scoreboard Operation Guide

Flip switch on back of console to ON position.

PREV CODE 4402 RESUME GAME will appear

Press ENTER \* YES

**DO NOT** type in a new code or change broadcast signals or channels if you accidentally scroll to these screens. Code must always be 4402. Broadcast signal must be 5 and channel must be 00.

### **To set game clock time:**

Press SET MAIN CLOCK

Type in desired time, press ENTER \* YES

Hit START and STOP to run time or stop time

### **To set Penalty for single player:**

Press PLAYER PENALTY under Guest or Home menu.

Press ENTER \* YES

Type in player number

Press ENTER \* YES

- Standard 2:00 penalty time should appear
- Type in penalty minutes if a longer penalty time is required
- Hit MAJOR PENALTY for 5:00 penalty

Press ENTER \* YES

### **To set subsequent penalties while first penalty is still ongoing:**

Press PLAYER PENALTY under Guest or Home menu.

2 P.. PN.... will appear.

Type in player number

Press ENTER \* YES

- o standard 2:00 penalty time should appear
- o Type in penalty minutes if a longer penalty time is required
- o Hit MAJOR PENALTY for 5:00 penalty

Press ENTER \* YES

This procedure can be followed for as many penalties as needed. Subsequent 3<sup>rd</sup> or 4<sup>th</sup> penalties will begin after initial penalty is over.

70.

**To Delete Penalty:**

Press DELETE PENALTY under Guest or Home

Penalty 1 will appear

Press ENTER \* YES to delete Penalty 1

To delete a subsequent penalty press the down arrow under the MENU button to scroll to the penalty you want to delete then press ENTER \* YES

To clear all penalties press CLEAR ALL PENALTIES under Guest or Home menu, Press ENTER \* YES

**To make MAIN CLOCK run without Penalty Time running:**

Press DISABLE PENALTY CLOCKS

This would be done for running clock time during intermission or setting penalties during a running time period.

Remember to press ENABLE PENALTY CLOCKS when you want penalty time to begin running.

**To add/remove a goal:**

Press SCORE +1 under Home or Guest

Press SCORE -1 under Home or Guest to remove a goal

**To add/remove a shot on goal:**

Press SHOTS ON GOAL +1 under Home or Guest Menu

Press SHOTS ON GOAL -1 under Home or Guest Menu to remove SOG

**To add/remove a save:**

Press SAVES +1 under Home or Guest Menu

Press SAVES -1 under Home or Guest Menu to remove a save

**To add a Period:**

Press PERIOD +1

Press PERIOD +1 until desired number of periods is shown on scoreboard

**DO NOT change any pre-settings on the MENU display.** This clock is set up for hockey games and no extra features are needed. Do not do exploratory searches through the menu or other functions. If you have questions find the arena supervisor to help.