

Clock Instructions (Code is: 4601)

Warmup	SET MAIN CLOCK	Type 5:00.0	ENTER * YES	START	Press START after both teams are on the ice				
First Period	SET MAIN CLOCK	Type 15:00.0	ENTER * YES	Time will display on the clock	START Press START when puck is dropped				
Stop Time	STOP	Press when whistle sounds (and check TIME display to be sure clock has stopped)	START	Press when puck is dropped (and check TIME display to be sure clock has started)					
Goal	SCORE +1	Shots on Goal		SHOTS ON GOAL +1	The clock in the Gold Medal Arena does not display Shots on Goal				
Between Periods	DISABLE PENALTY CLOCKS	SET MAIN CLOCK	Type 1:00.0	ENTER * YES	START Do not enter time until horn sounds at the end of the period. Press START. Have to DISABLE only when there is a penalty that carries over to the next period.				
2nd & 3rd Periods	ENABLE PENALTY CLOCKS	PERIOD +1	SET MAIN CLOCK	Type: 15:00.0	ENTER * YES	START Do not enter time until horn sounds at the end of the period. Press START. Have to ENABLE only when there is a penalty that carries over from the previous period.			
Add Penalty (Enter for correct team HOME or GUEST)	PLAYER PENALTY	ENTER * YES	Type Player Number (optional)	ENTER * YES	1:30 (2:00 is default)	ENTER * YES	Penalty time will display on clock	START	Press START when puck is dropped if clock is stop time.
When the clock is on running time, can enter the penalty without having to stop the clock Penalty time will appear on the scoreboard when press enter.								ENTER * YES	Press ENTER if the clock is running time.
Clear Penalty - When HOME or GUEST has only one penalty or at end of game									
Under the HOME or GUEST button			CLEAR ALL PENALTIES	ENTER * YES					
Clear Penalty (When a team has more than one penalty)	DELETE PENALTY	▲ MENU ▼	Press the black arrow button above or below the menu button to scroll to the desired penalty. Clear the oldest penalty when a goal is scored.					ENTER * YES	